

**RØDECASTER** PRO™


PODCAST PRODUCTION STUDIO

---

MULTITRACK GUIDELINES | REAPER | MAC


# STEP 1

Go to File / New Project.

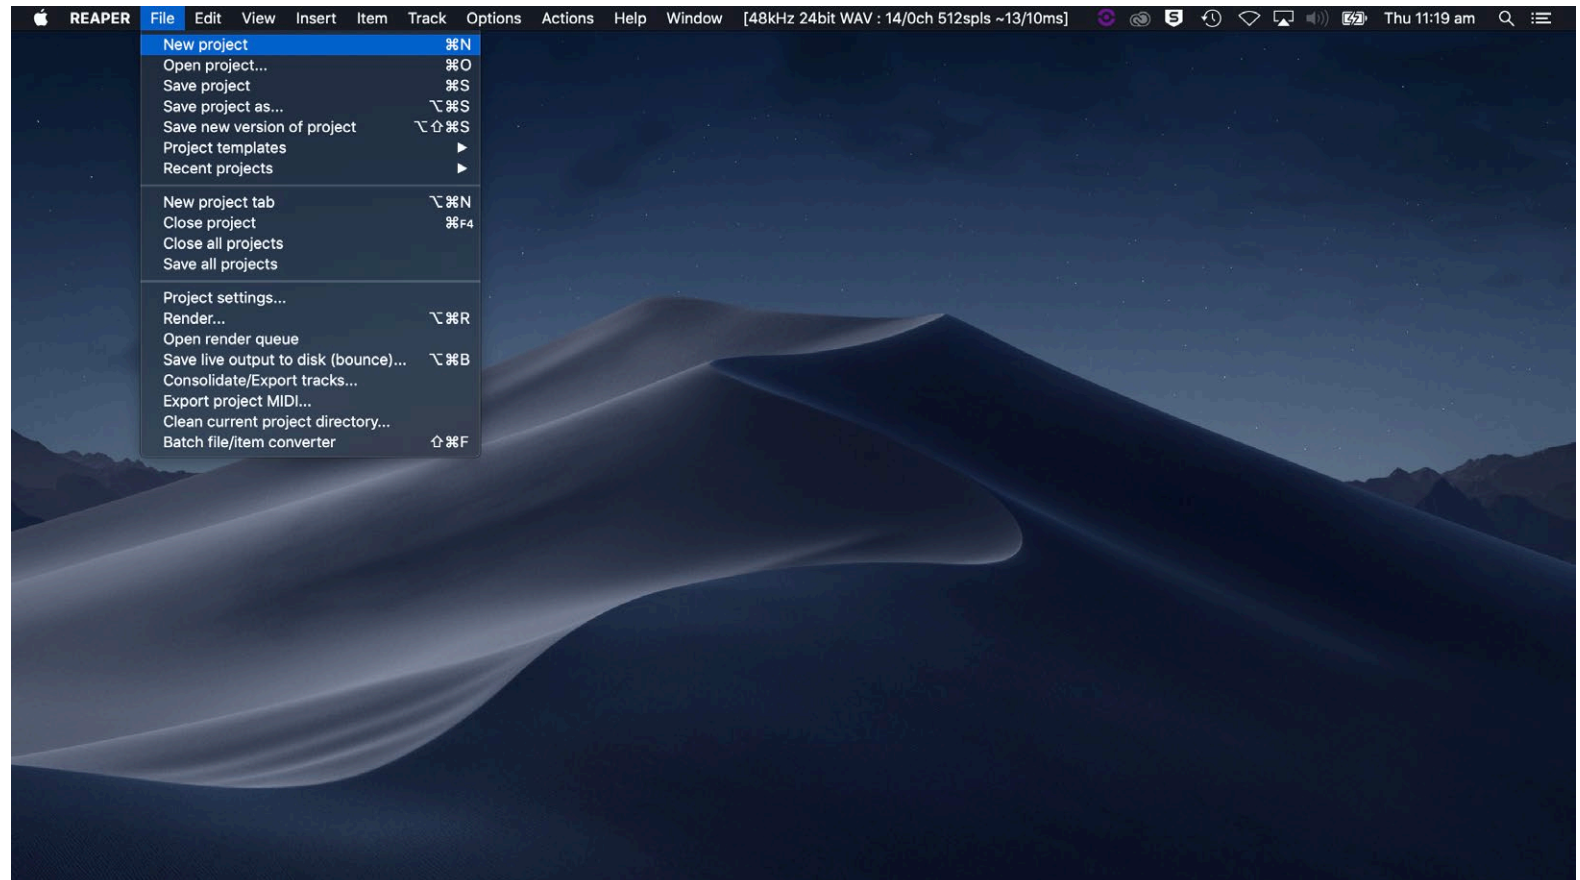

## STEP 2

Go to REAPER / Preferences.

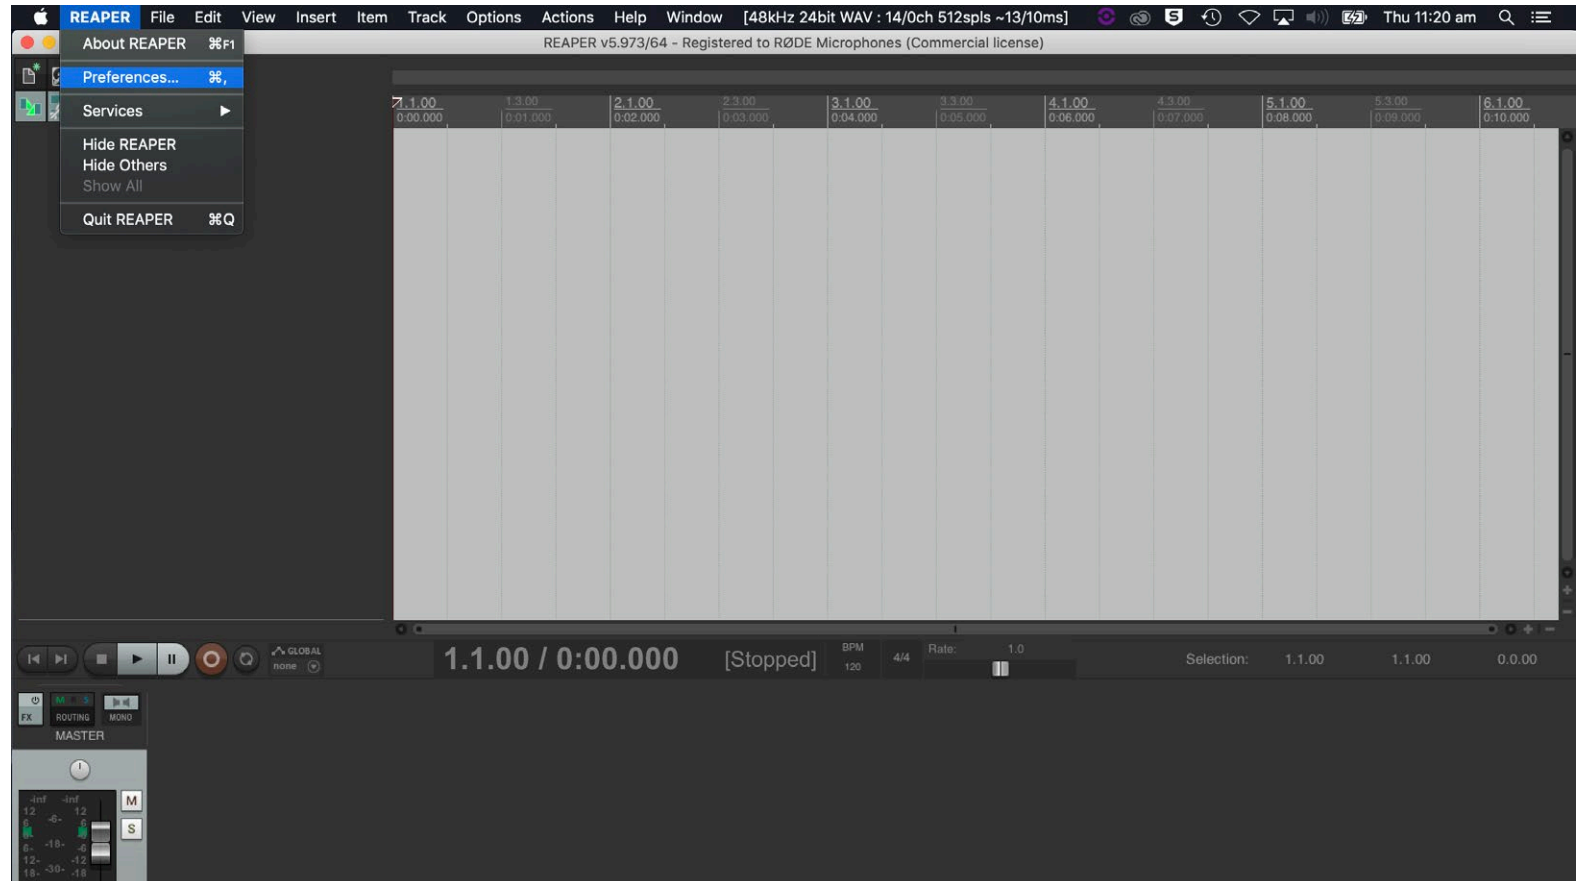

## STEP 3


In REAPER Preferences, go to Audio / Device and ensure the Input Device is RODECaster Pro Multichannel.

Tick "Request block size" and enter 1024.

Tick "Allow projects to override device sample rate".


Tick "Allow use of different input and output devices" and change Output Device to RODECaster Pro Stereo.

Click OK.

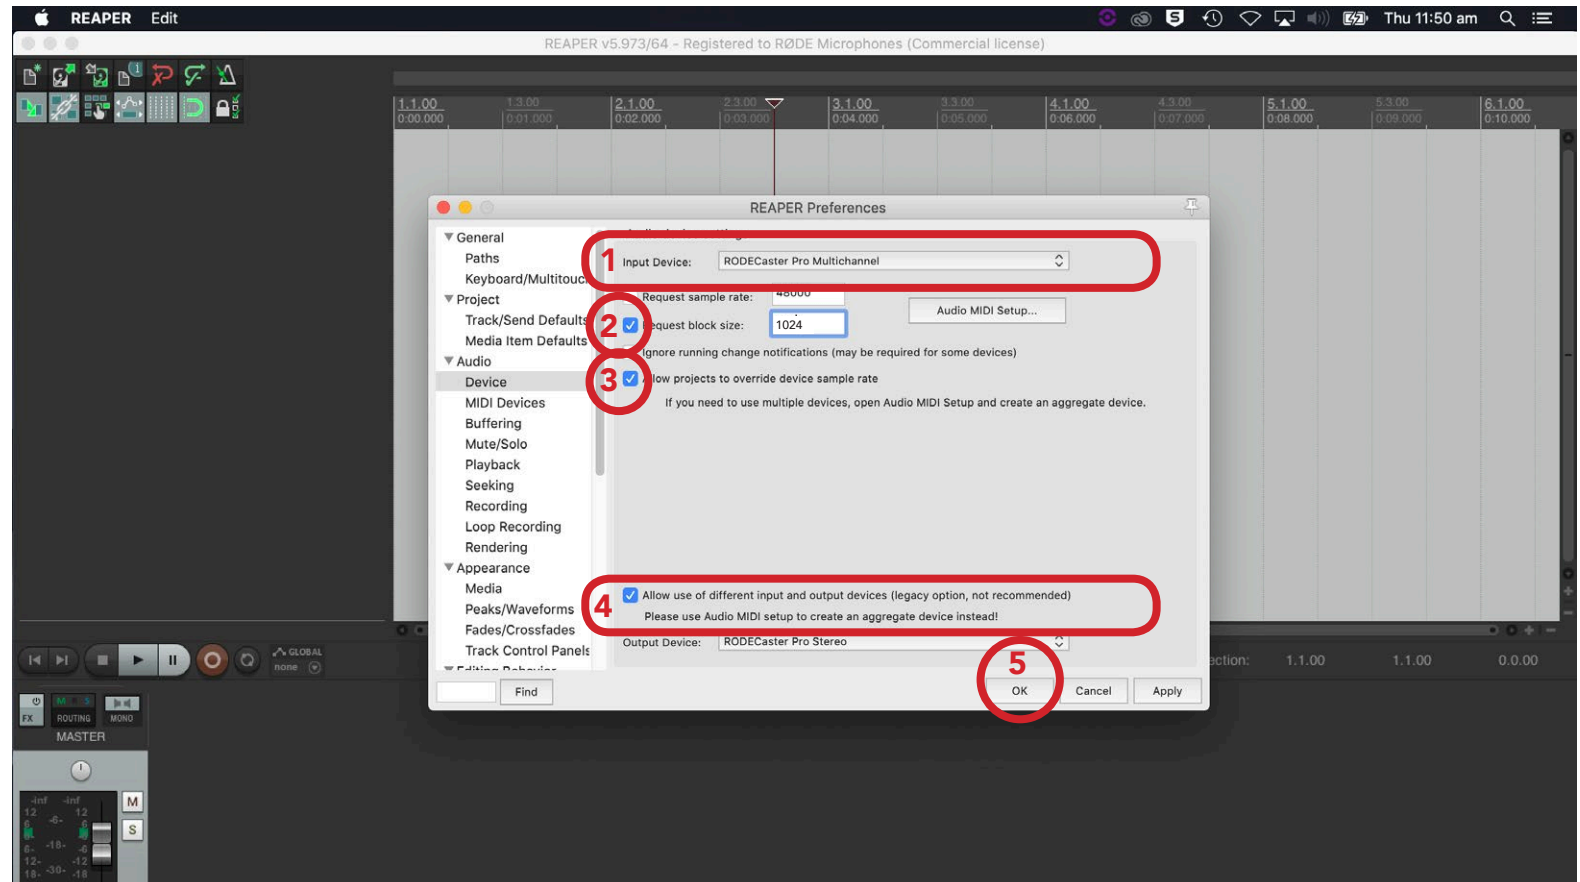


## STEP 4

Right click on the track panel and click "Insert multiple tracks..."

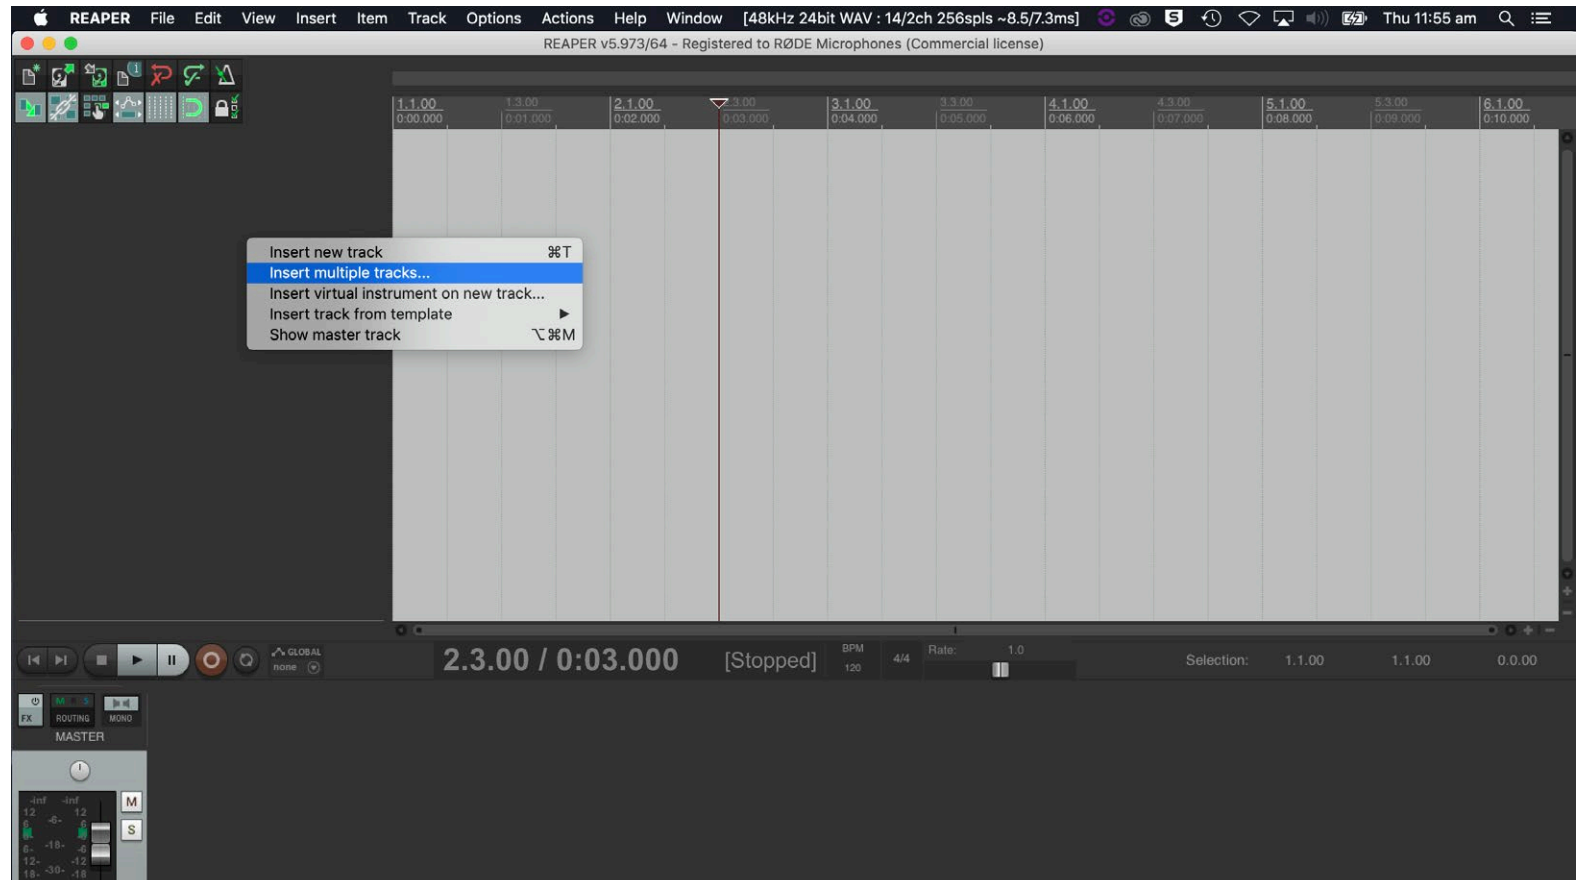


## STEP 5

Insert 9 new tracks after the last touched track.

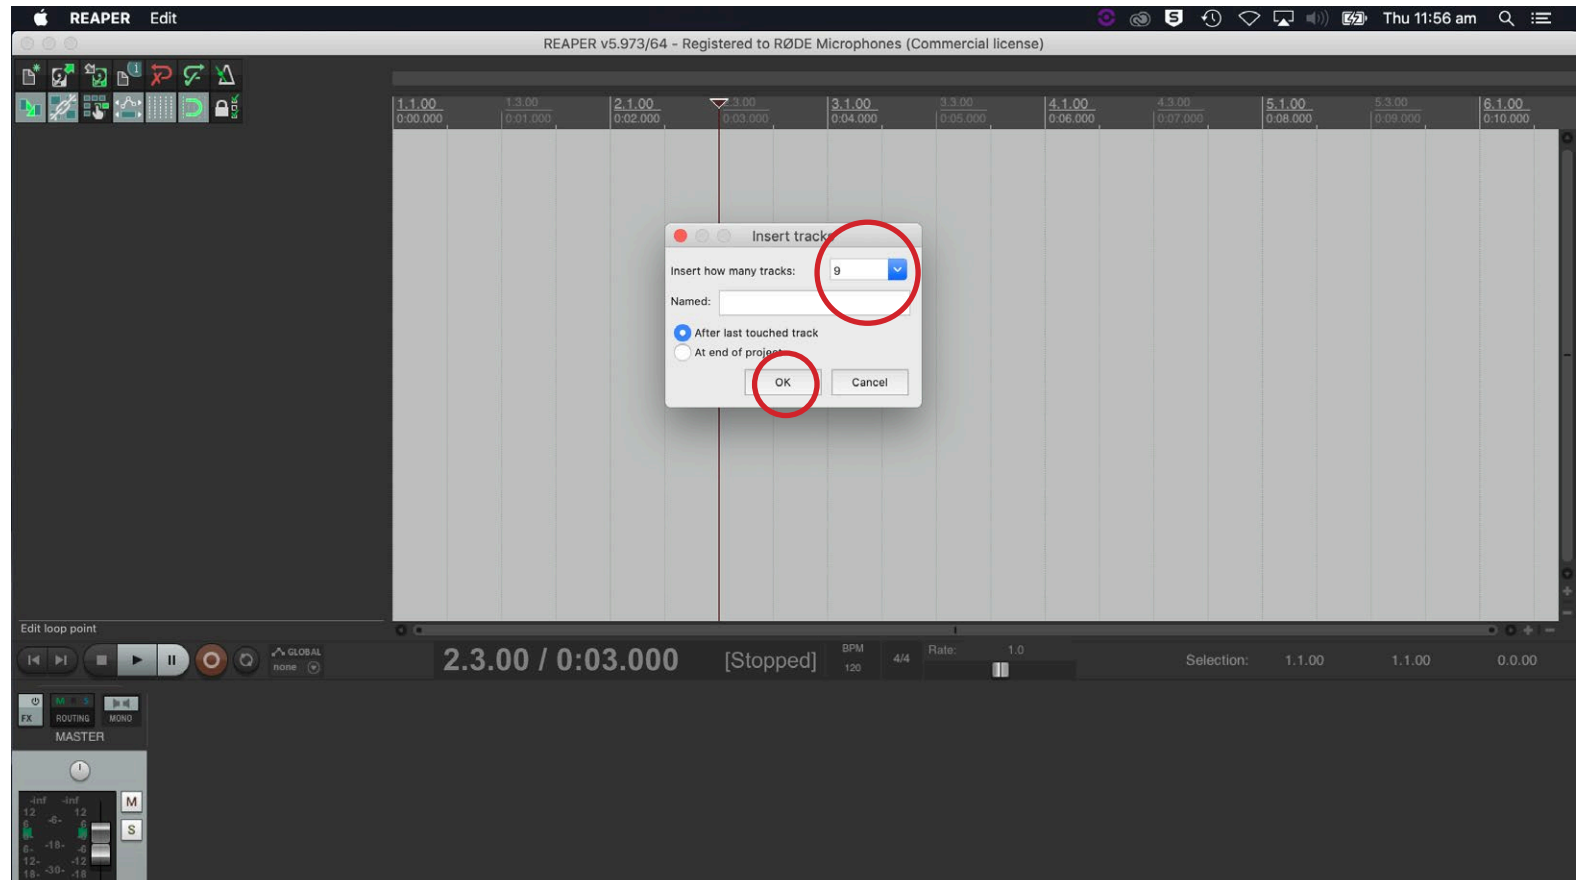


## STEP 6

Rename the first of these tracks to "Stereo Mix" by double clicking on the track title.

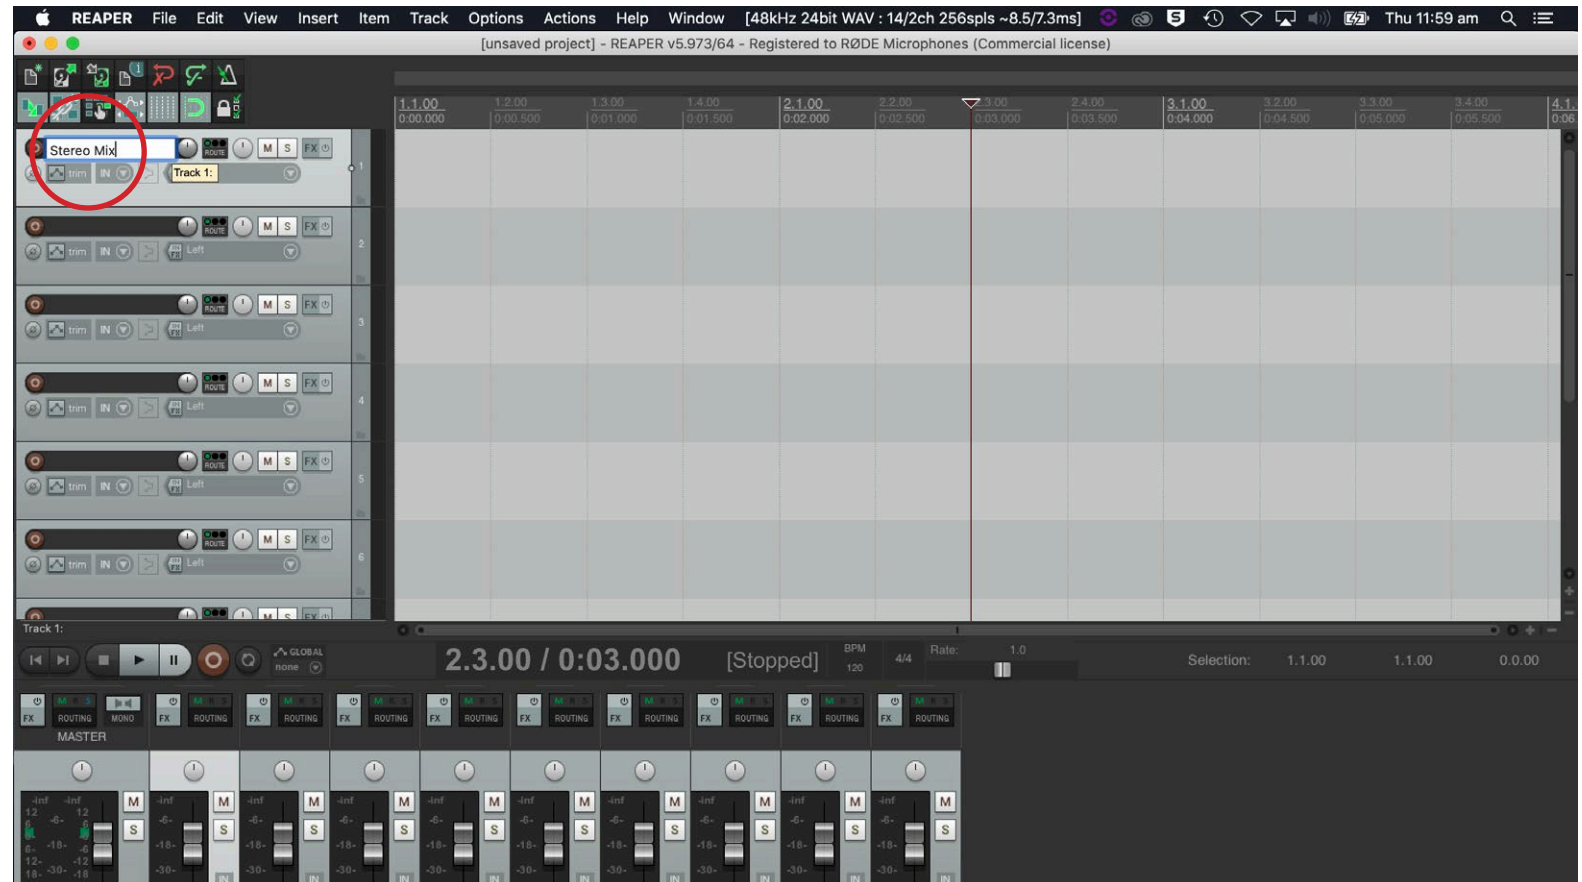

## STEP 7

On the same track, click on the Input section drop down menu and select Input: Stereo / Left / Right.

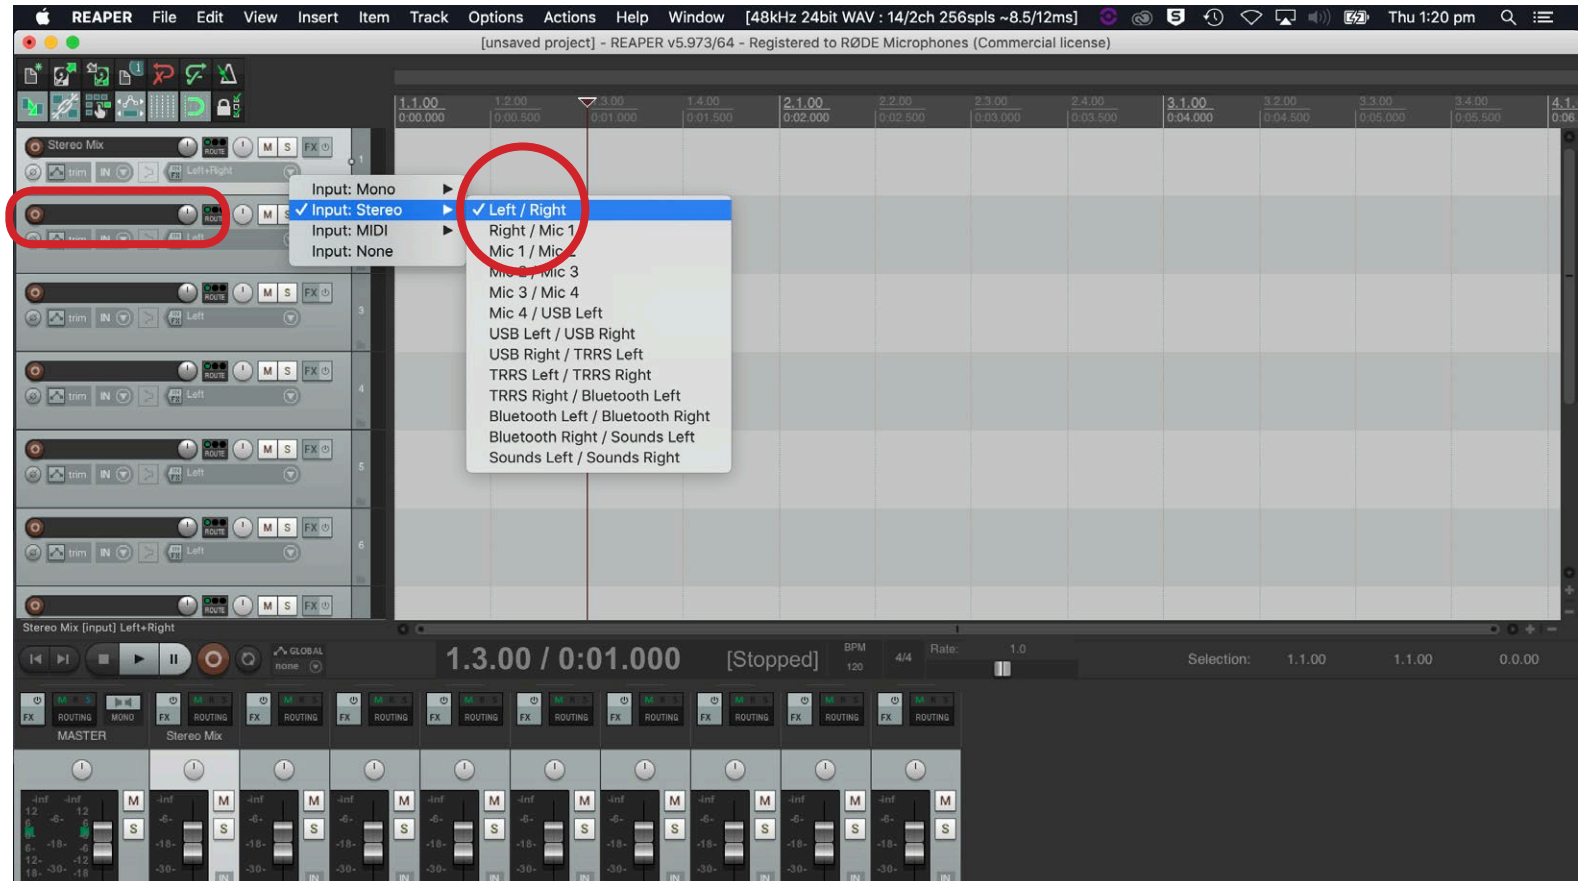




## STEP 8

Rename the next track Mic 1 by double clicking on the track title.


Click on the Input drop down menu and change the input to Input: Mono / Mic 1.

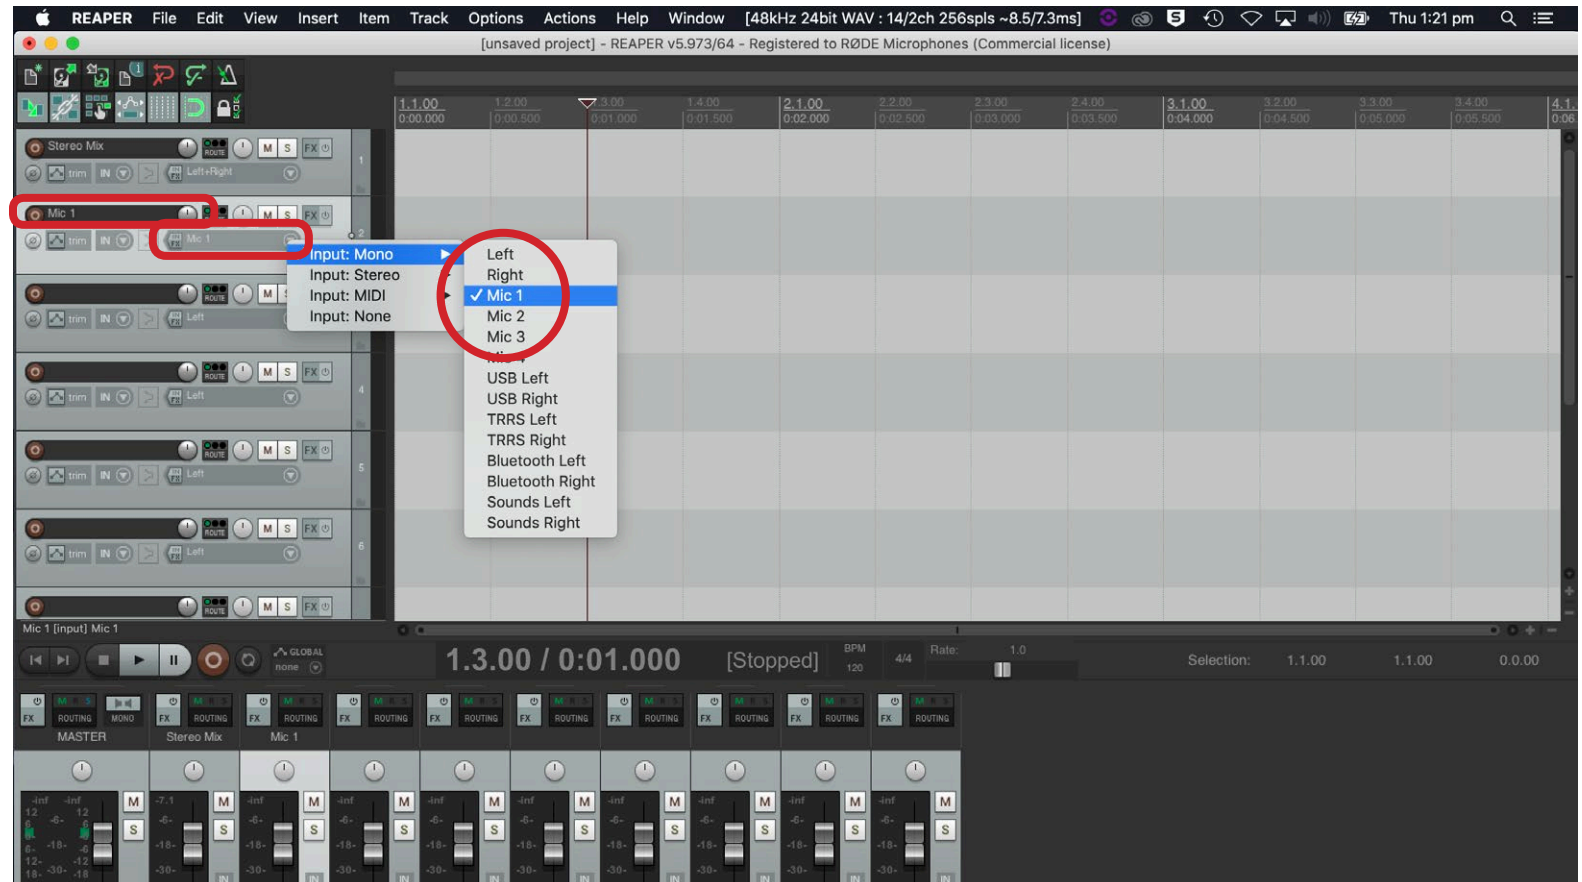

## STEP 9

Rename the next track Mic 2 by double clicking on the track title.


Click on the Input drop down menu and change the input to Input: Mono / Mic 2.

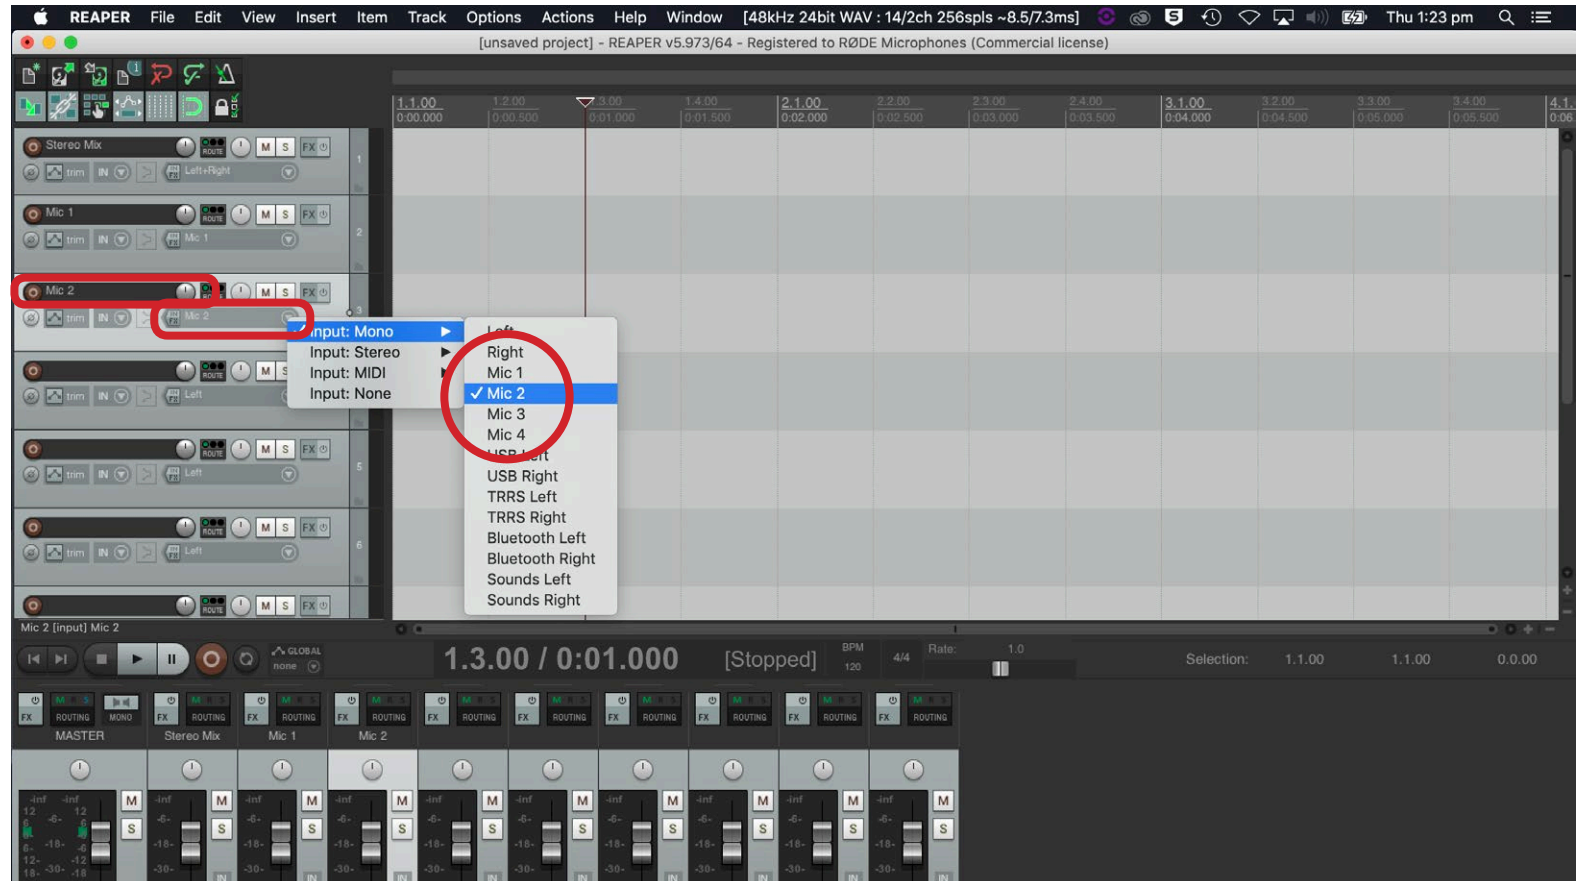

# STEP 10

Rename the next track Mic 3 by double clicking on the track title.


Click on the Input drop down menu and change the input to Input: Mono / Mic 3.

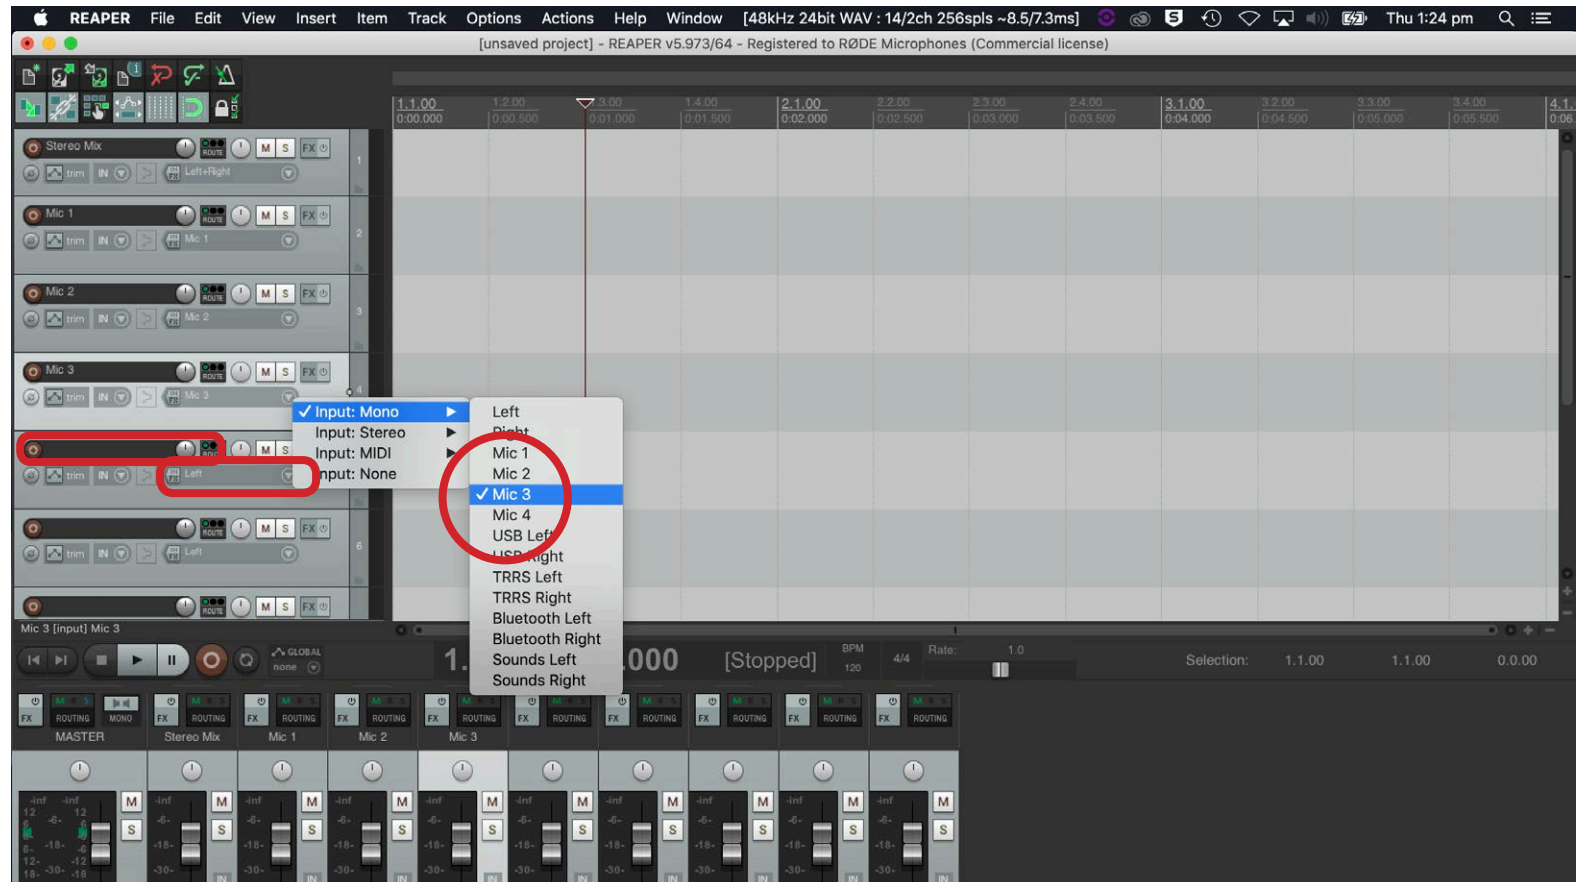

# STEP 11

Rename the next track Mic 4 by double clicking on the track title.


Click on the Input drop down menu and change the input to Input: Mono / Mic 4.

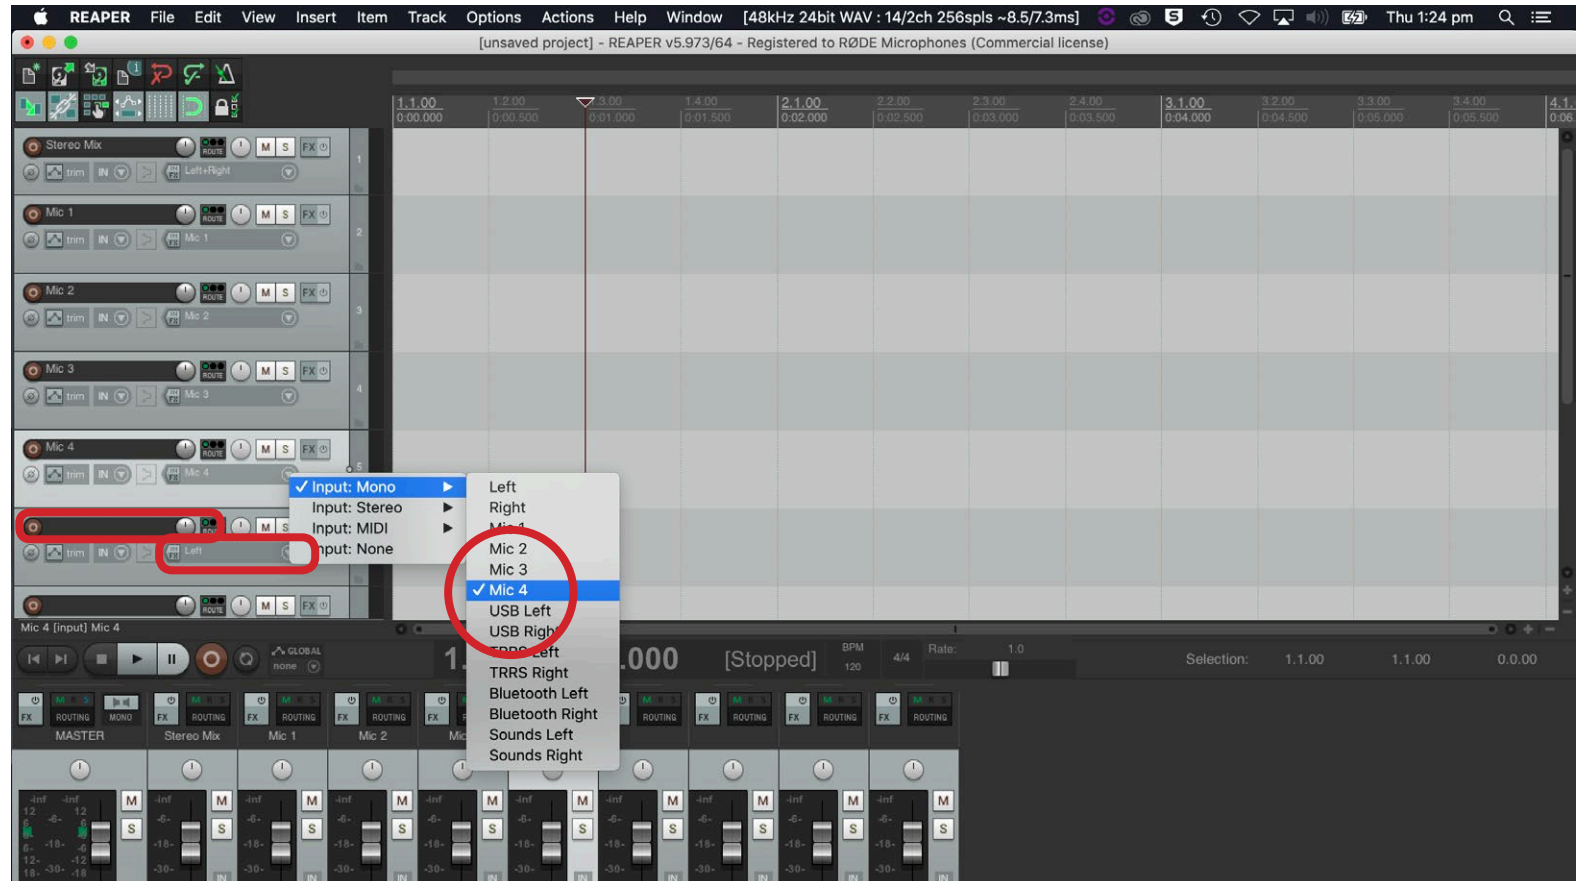

## STEP 12

Rename the next track USB by double clicking on the track title.


Click on the Input drop down menu and change the input to Input: Stereo / USB Left / USB Right.

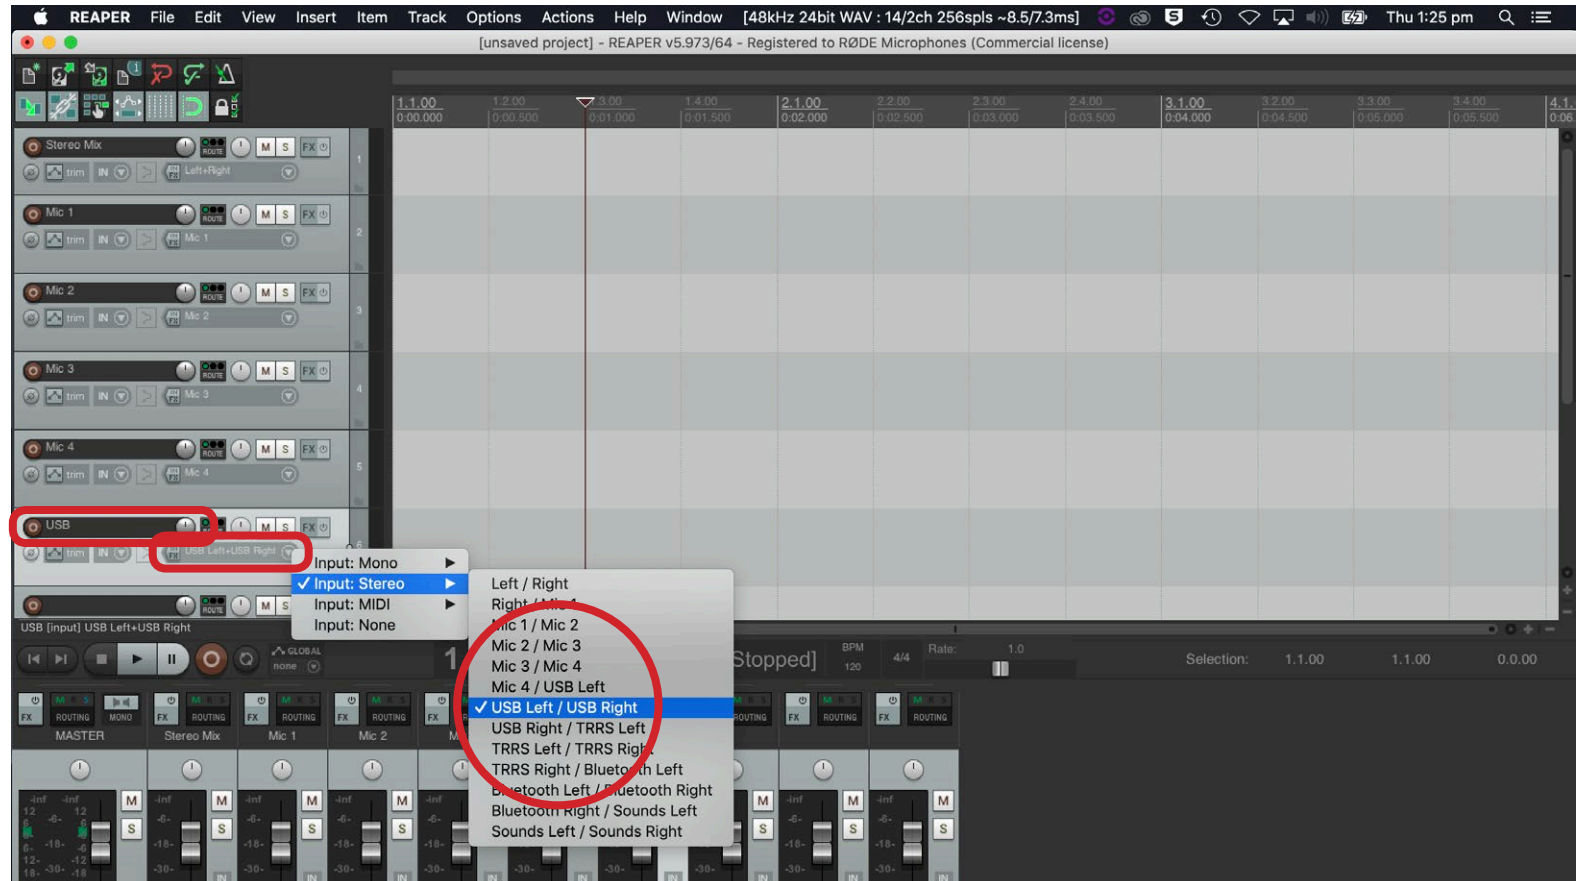

## STEP 13

Rename the next track TRRS by double clicking on the track title.


Click on the Input drop down menu and change the input to Input: Stereo / TRRS Left / TRRS Right.

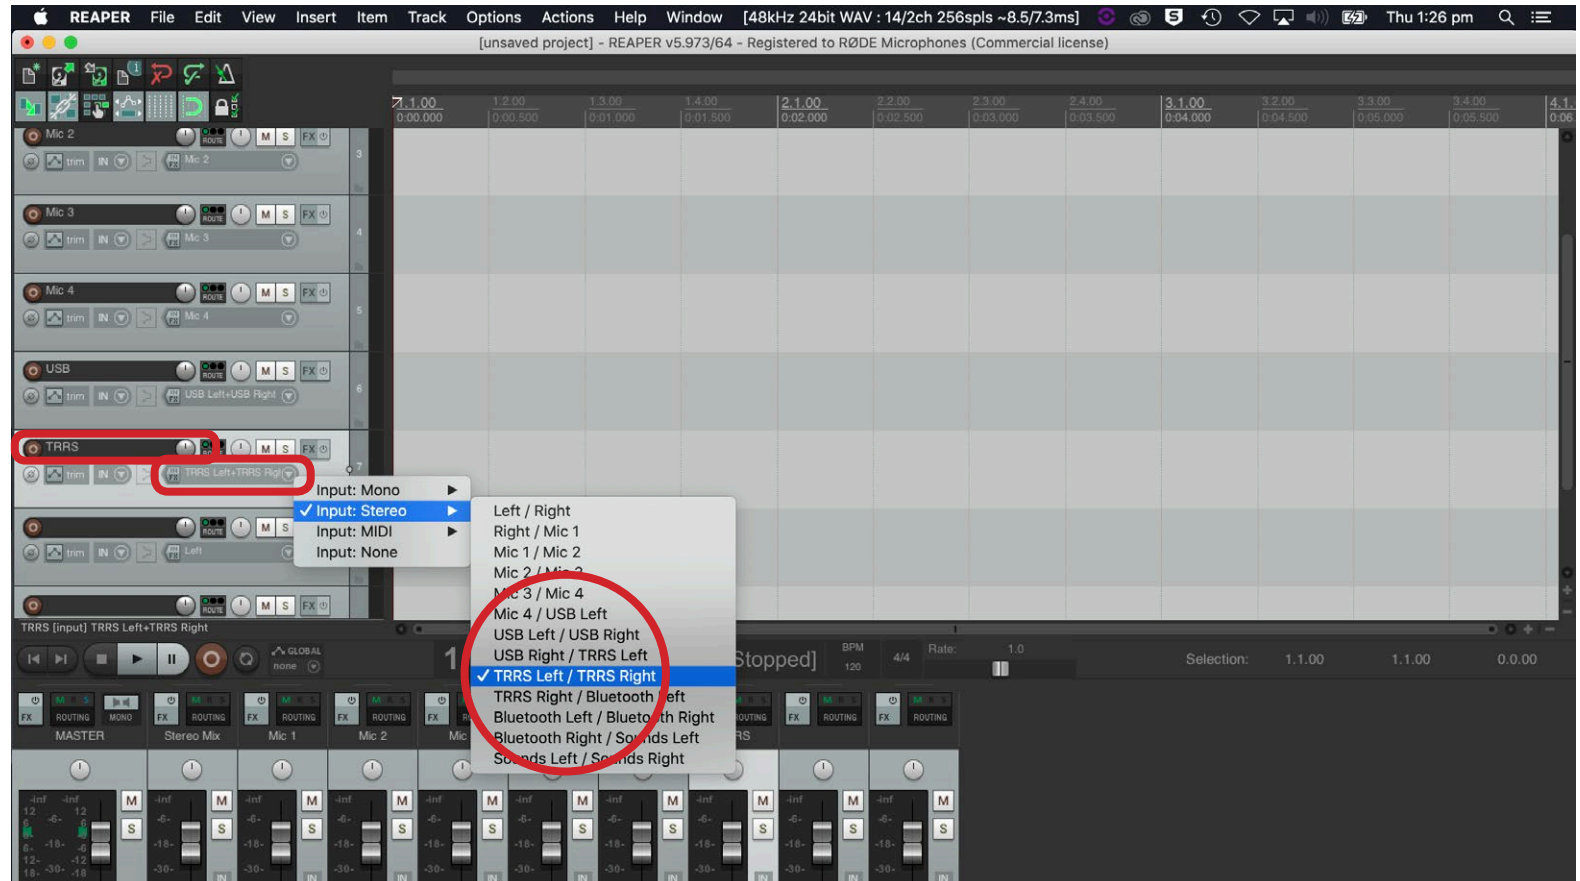

# STEP 14

Rename the next track Bluetooth by double clicking on the track title.


Click on the Input drop down menu and change the input to Input: Stereo / Bluetooth Left / Bluetooth Right.

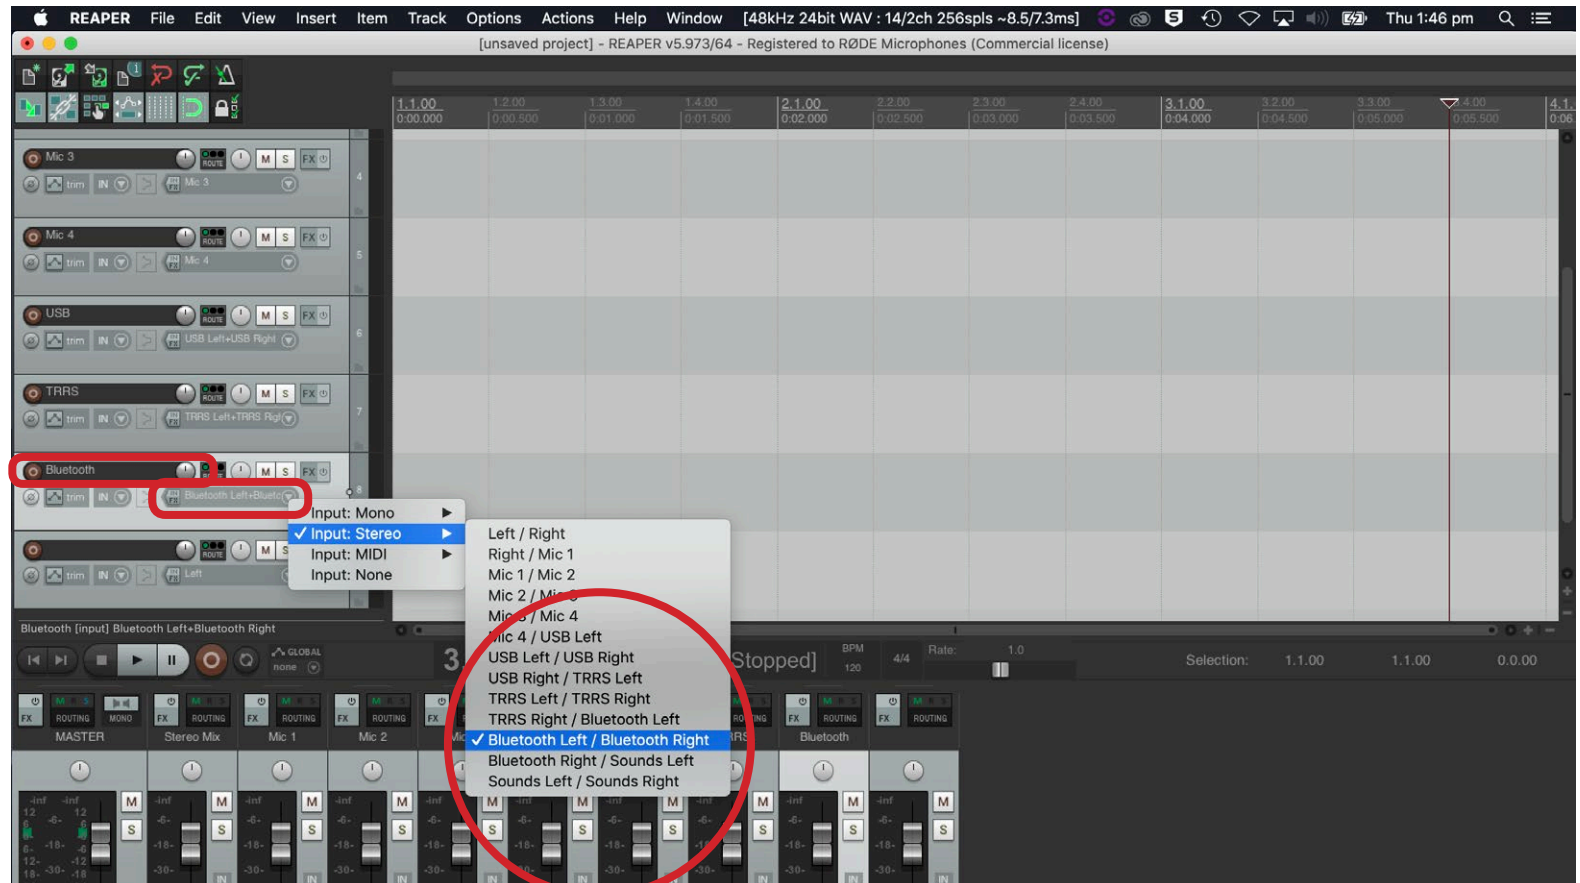

## STEP 15

Rename the next track Sound Pads by double clicking on the track title.


Click on the Input drop down menu and change the input to Input: Stereo / Sounds Left / Sounds Right.

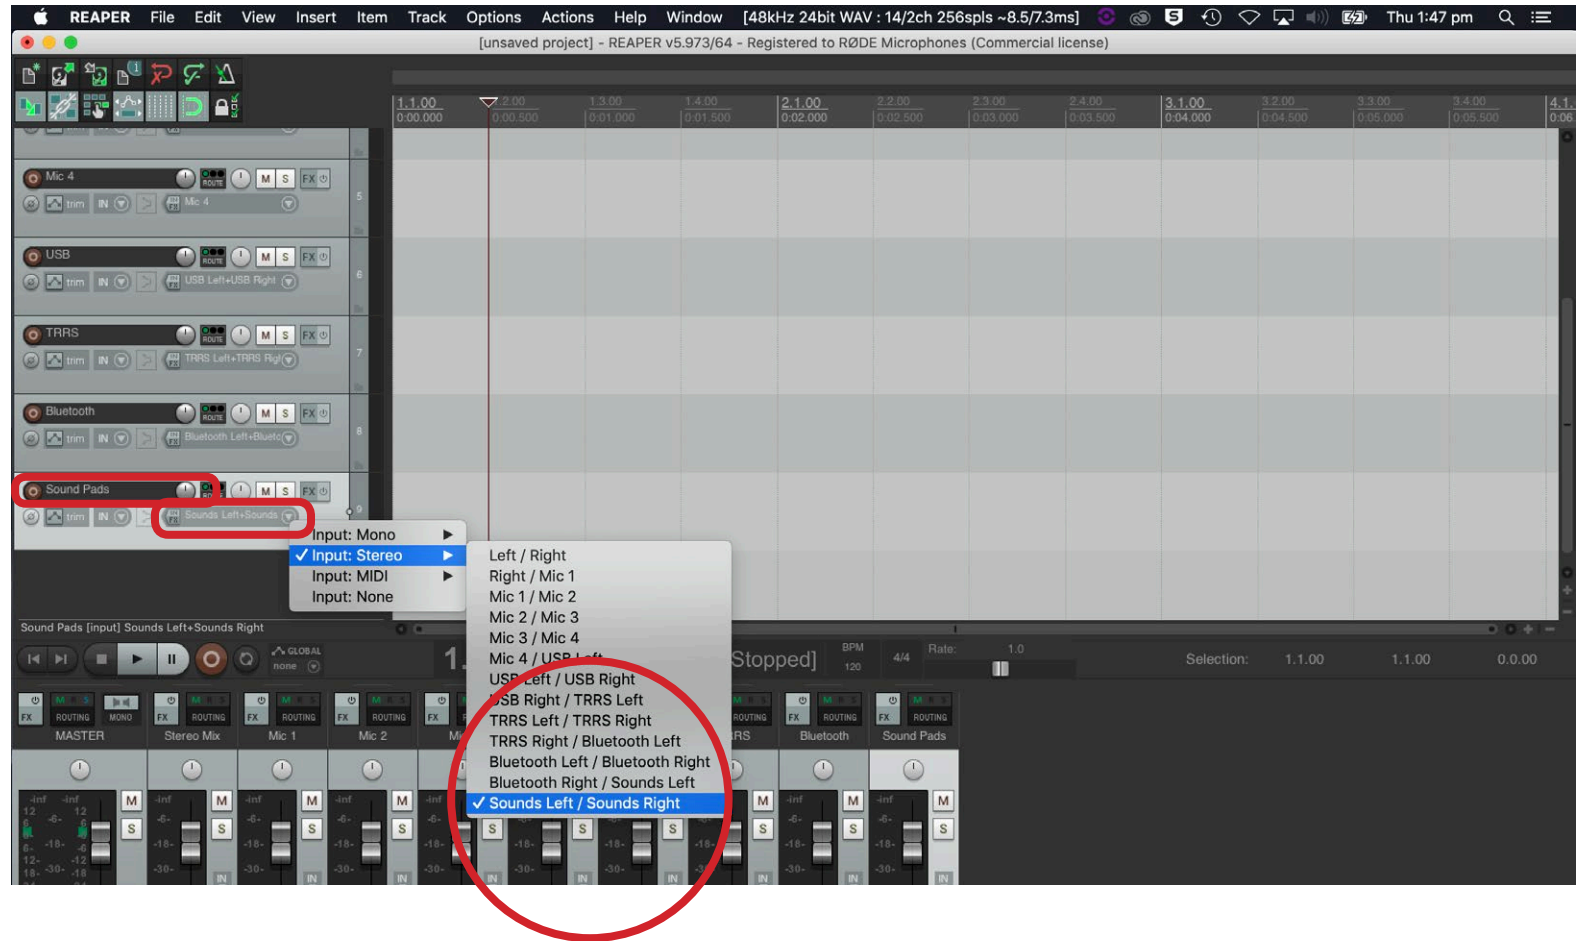



# STEP 16

Record enable each track by clicking on the red record button next to the track title.

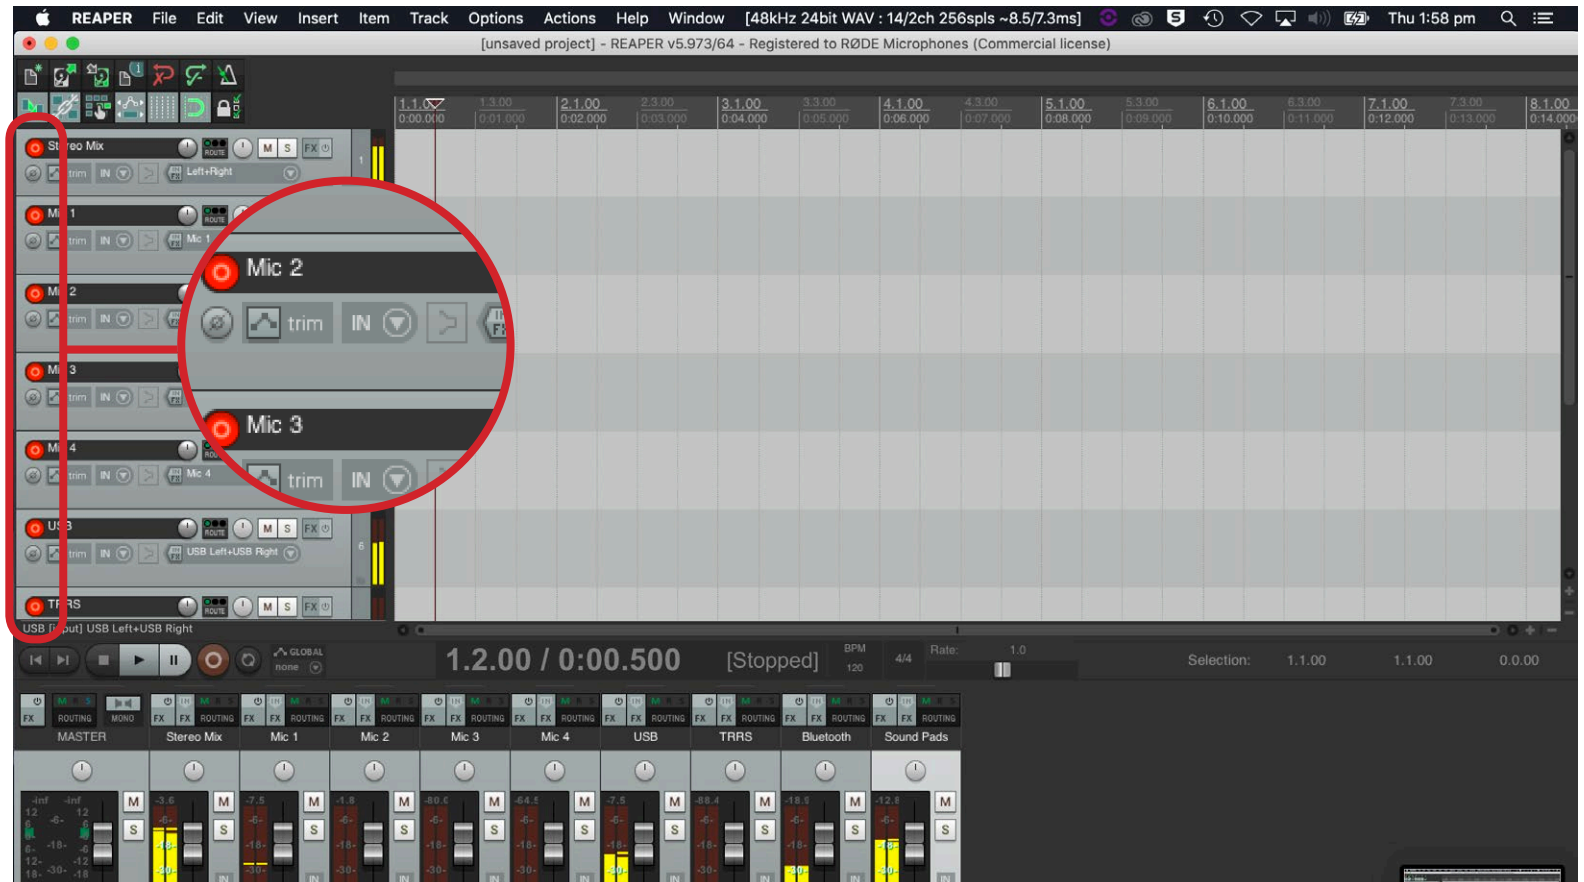

# STEP 17

Hit Record!

